

ELAD FDM77 Driver Installation

This document describes the installation procedure of the USB driver for Windows 7 operating system

- Install the software version 5.0 or above. (An account with administrative privileges is required)
- Connect the FDM77 to a free USB 2.0 port of the PC, then turn on the instrument.
- Go to "Start"->"Control Panel"->"System And Security"->"Device Manager"



• Select the device: "ELAD FDM77" in the section "Other devices", then right click and select "Update software and driver..."

En Device Manager		
File Action View Help		
ELAD-UT82-PC		
Disk drives		
Display adapters		
Floppy disk drives		
Hoppy drive controllers		
> 🖓 🙀 Human Interface Devices		
D - The ATA/ATAPI controllers		
🔉 - 🟺 IEEE 1394 Bus host controllers		
▷ - Keyboards		
▷-월 Mice and other pointing devices		
>- Monitors		
Network adapters		
Ports (COM & LP Update Driver Software		
Processors Disable		
Sound, video and Uninstall		
System devices		
Universal Serial B Scan for hardware change	B	
Properties		
Launches the Update Driver Software Wizard for the selected device.		

• In the next window, select the second option to install the driver manually



• Select the folder: C:\Program Files (x86)\FM77\driver

		×
\bigcirc	Update Driver Software - ELAD-FDM77	
	Browse for driver software on your computer	
Search for driver software in this location:		
	C:\Program Files (x86)\FDM77\drivers\	Browse
	✓ Include subfolders	Ν
 Let me pick from a list of device drivers on my computer This list will show installed driver software compatible with the device, and all driver software in the same category as the device. 		er and all driver
		Next Cancel

• Ignore the warning and continue by click on the second option to install the driver



• Driver Installation completed

